


ION - JUNG ADAPTER SET


1x Hex Nut

(Included with the LED dimmer)

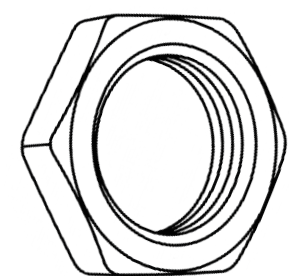


1x Ring



(Included with the LED dimmer)

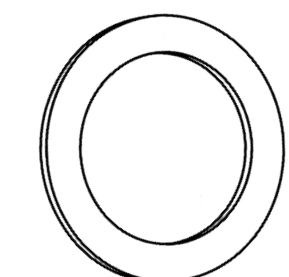


2x Screws

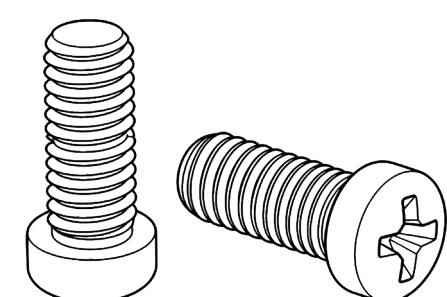


1x Metal plate

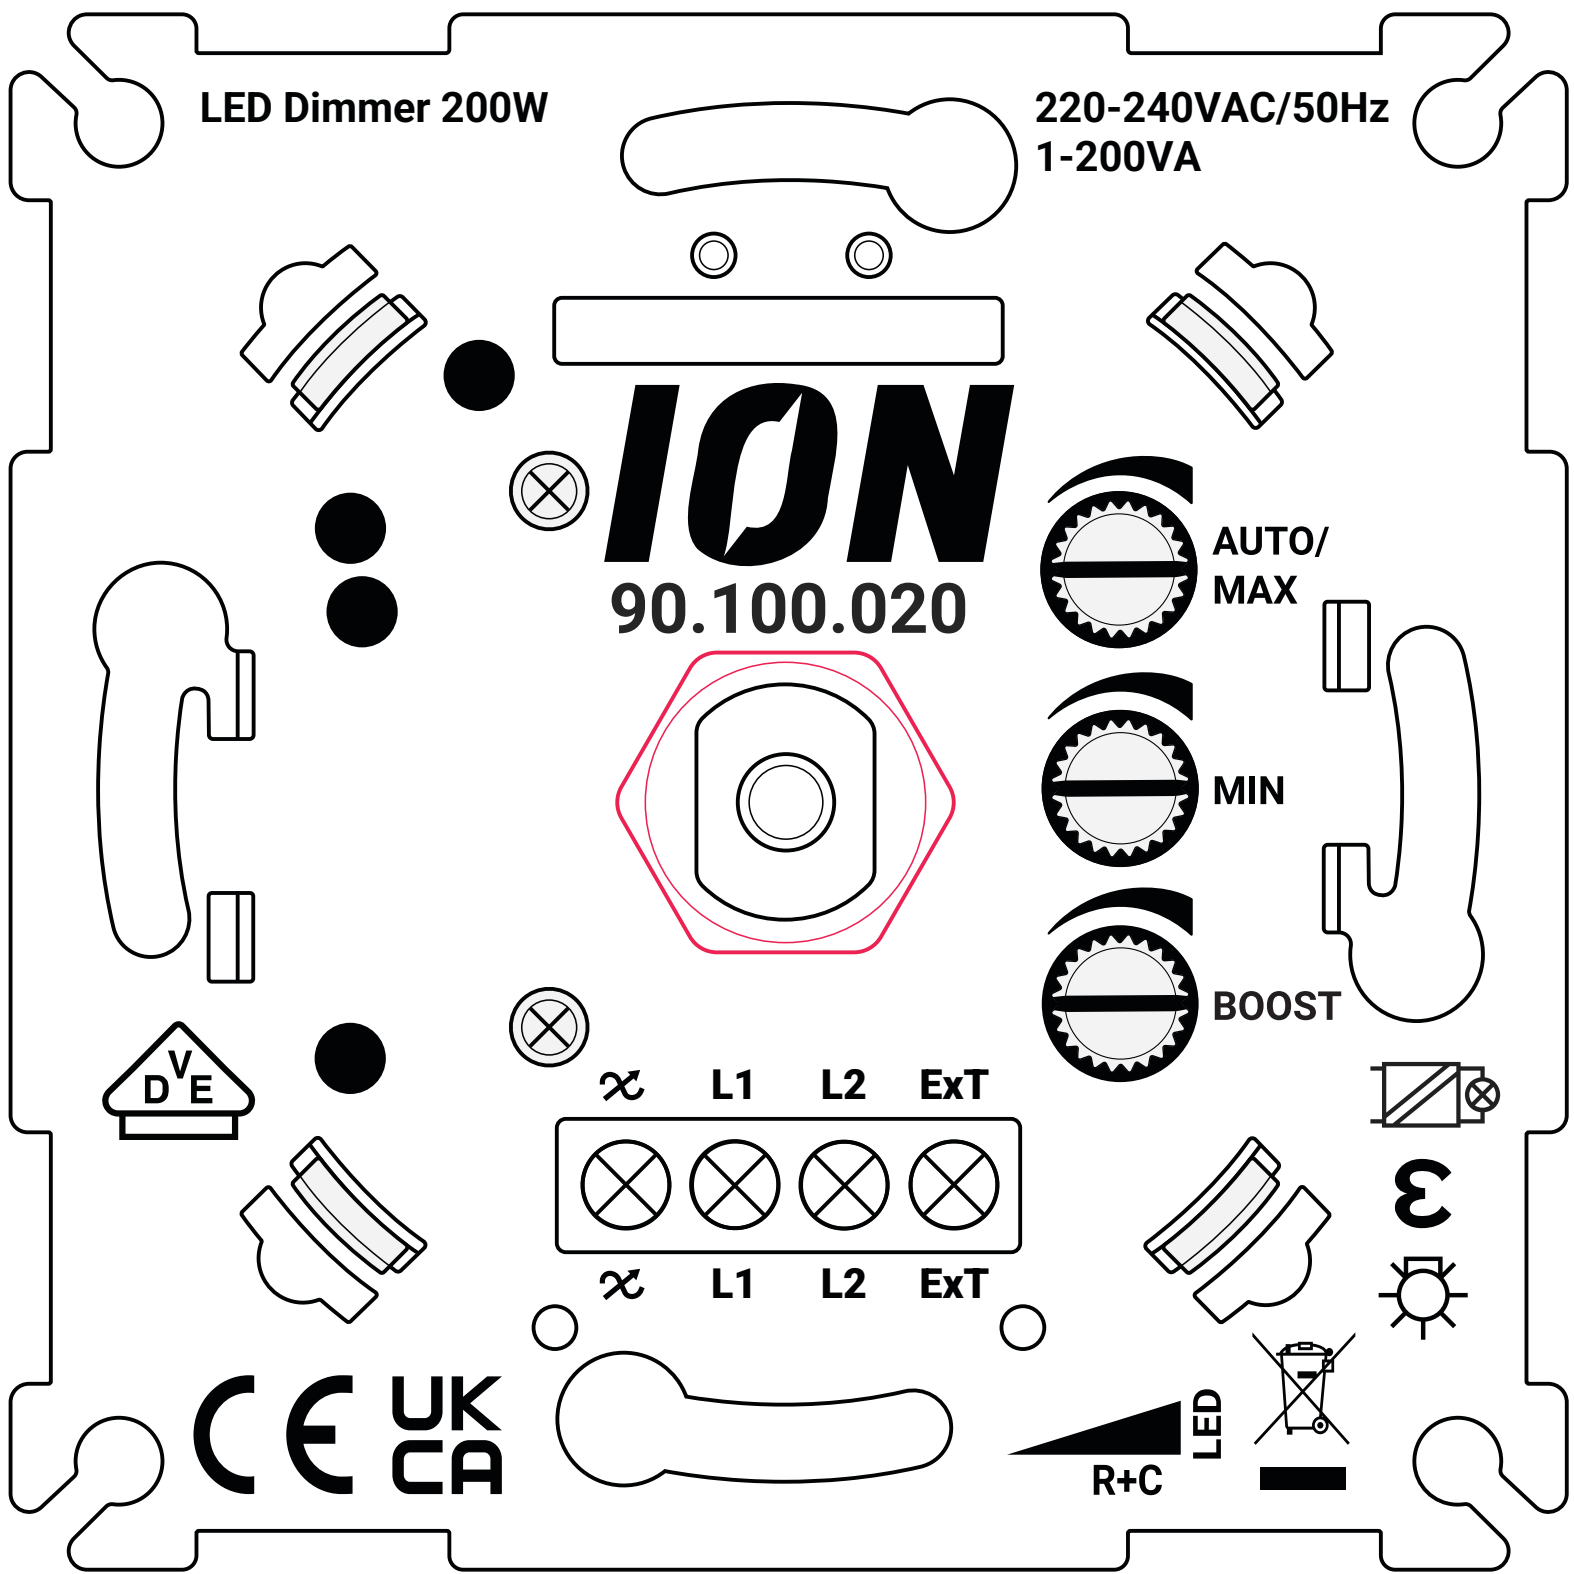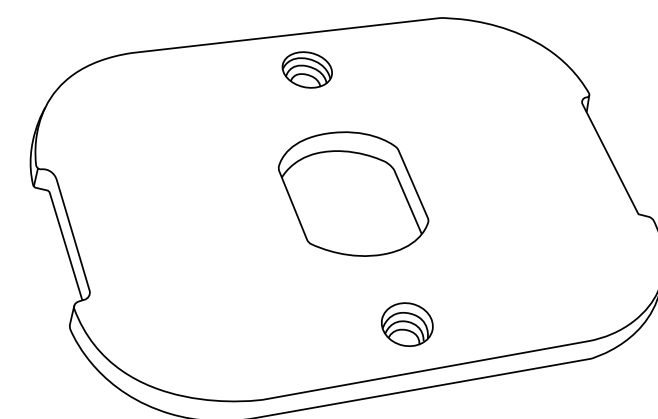


Step 1. Turn the **hex nut** counterclockwise and remove **the ring**.

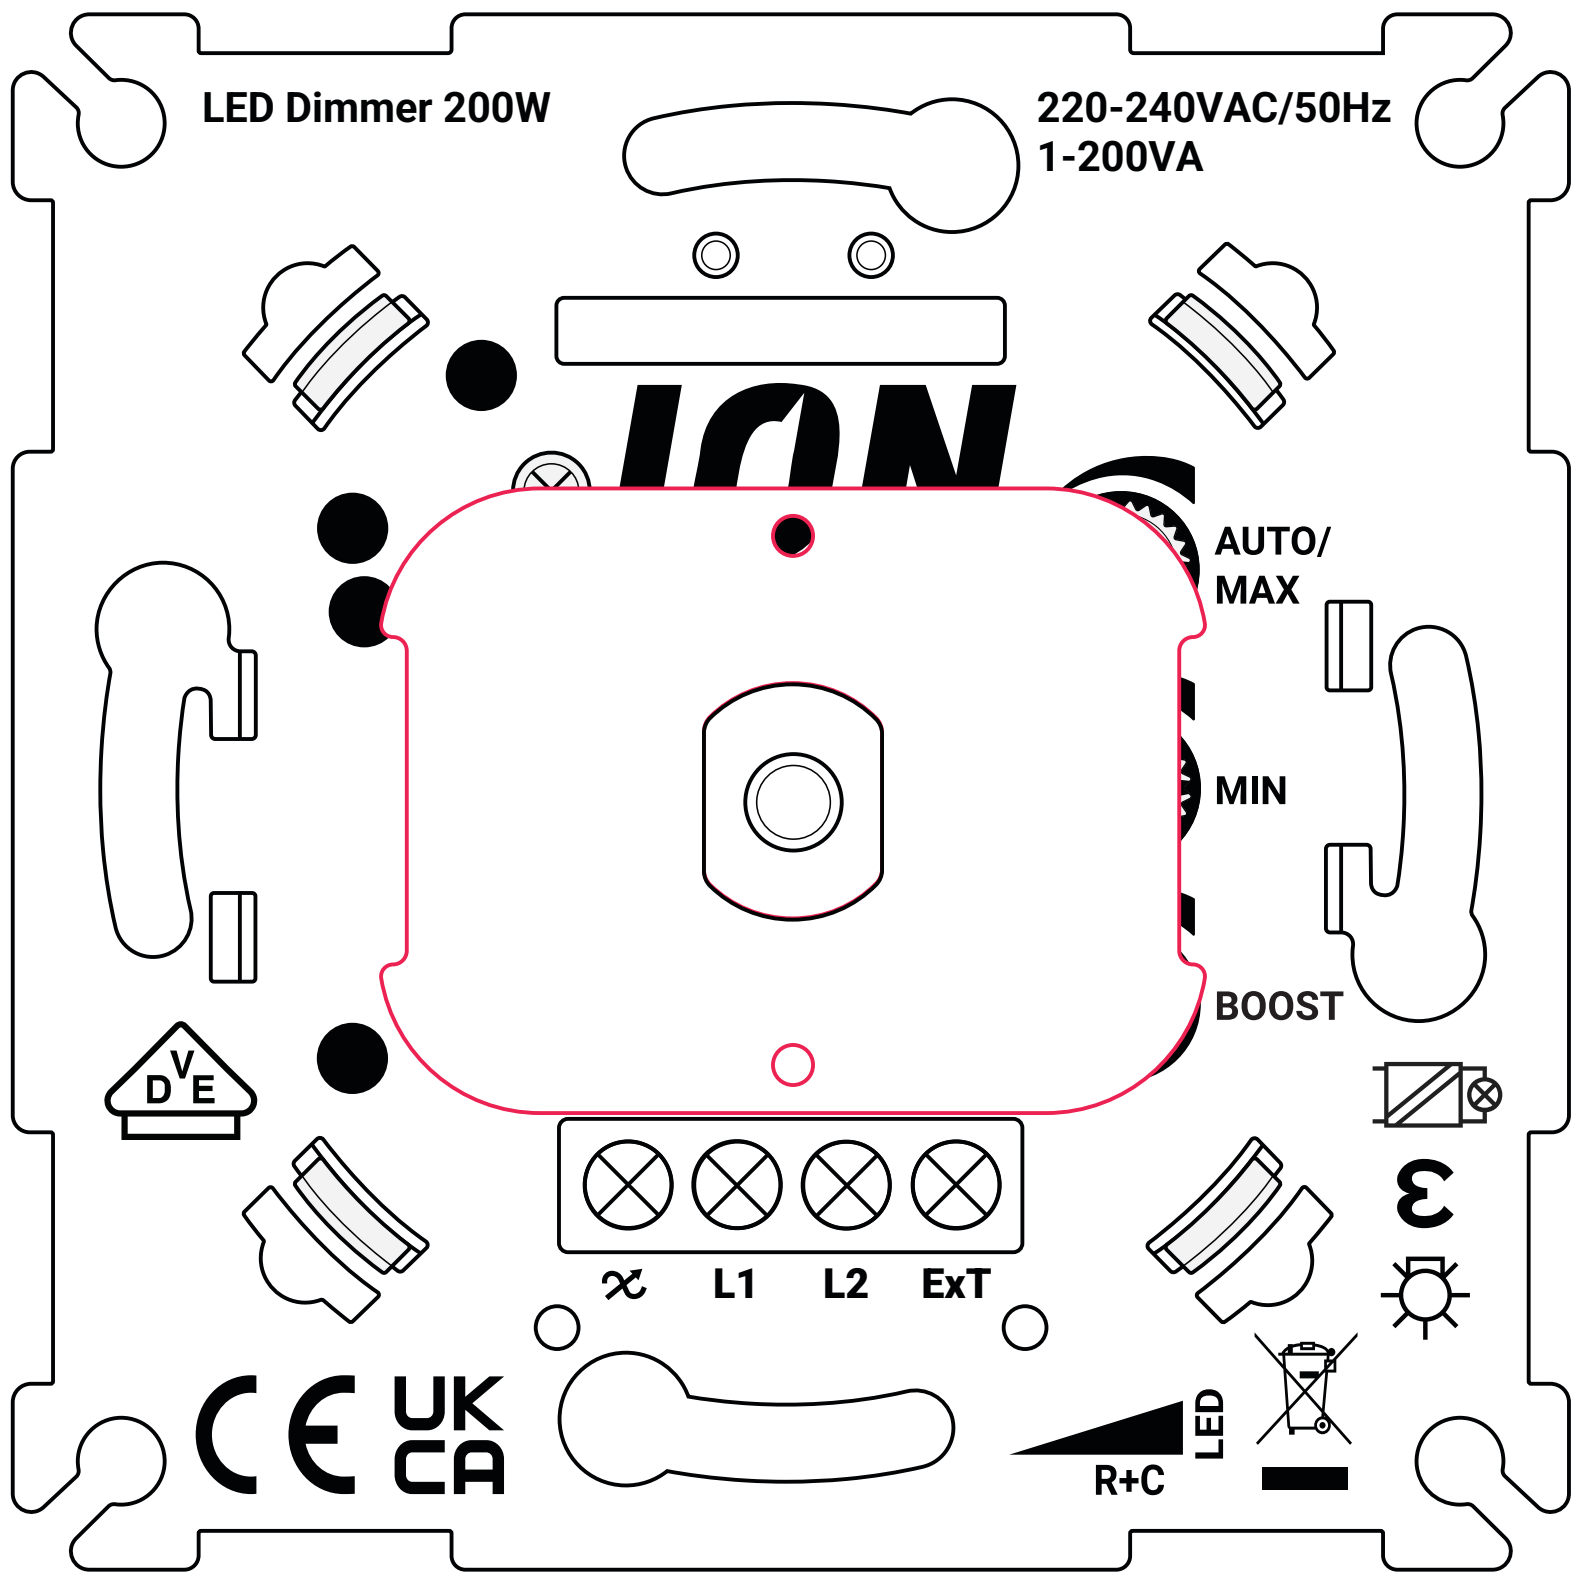


Step 2. Place the **metal plate** on the dimmer.

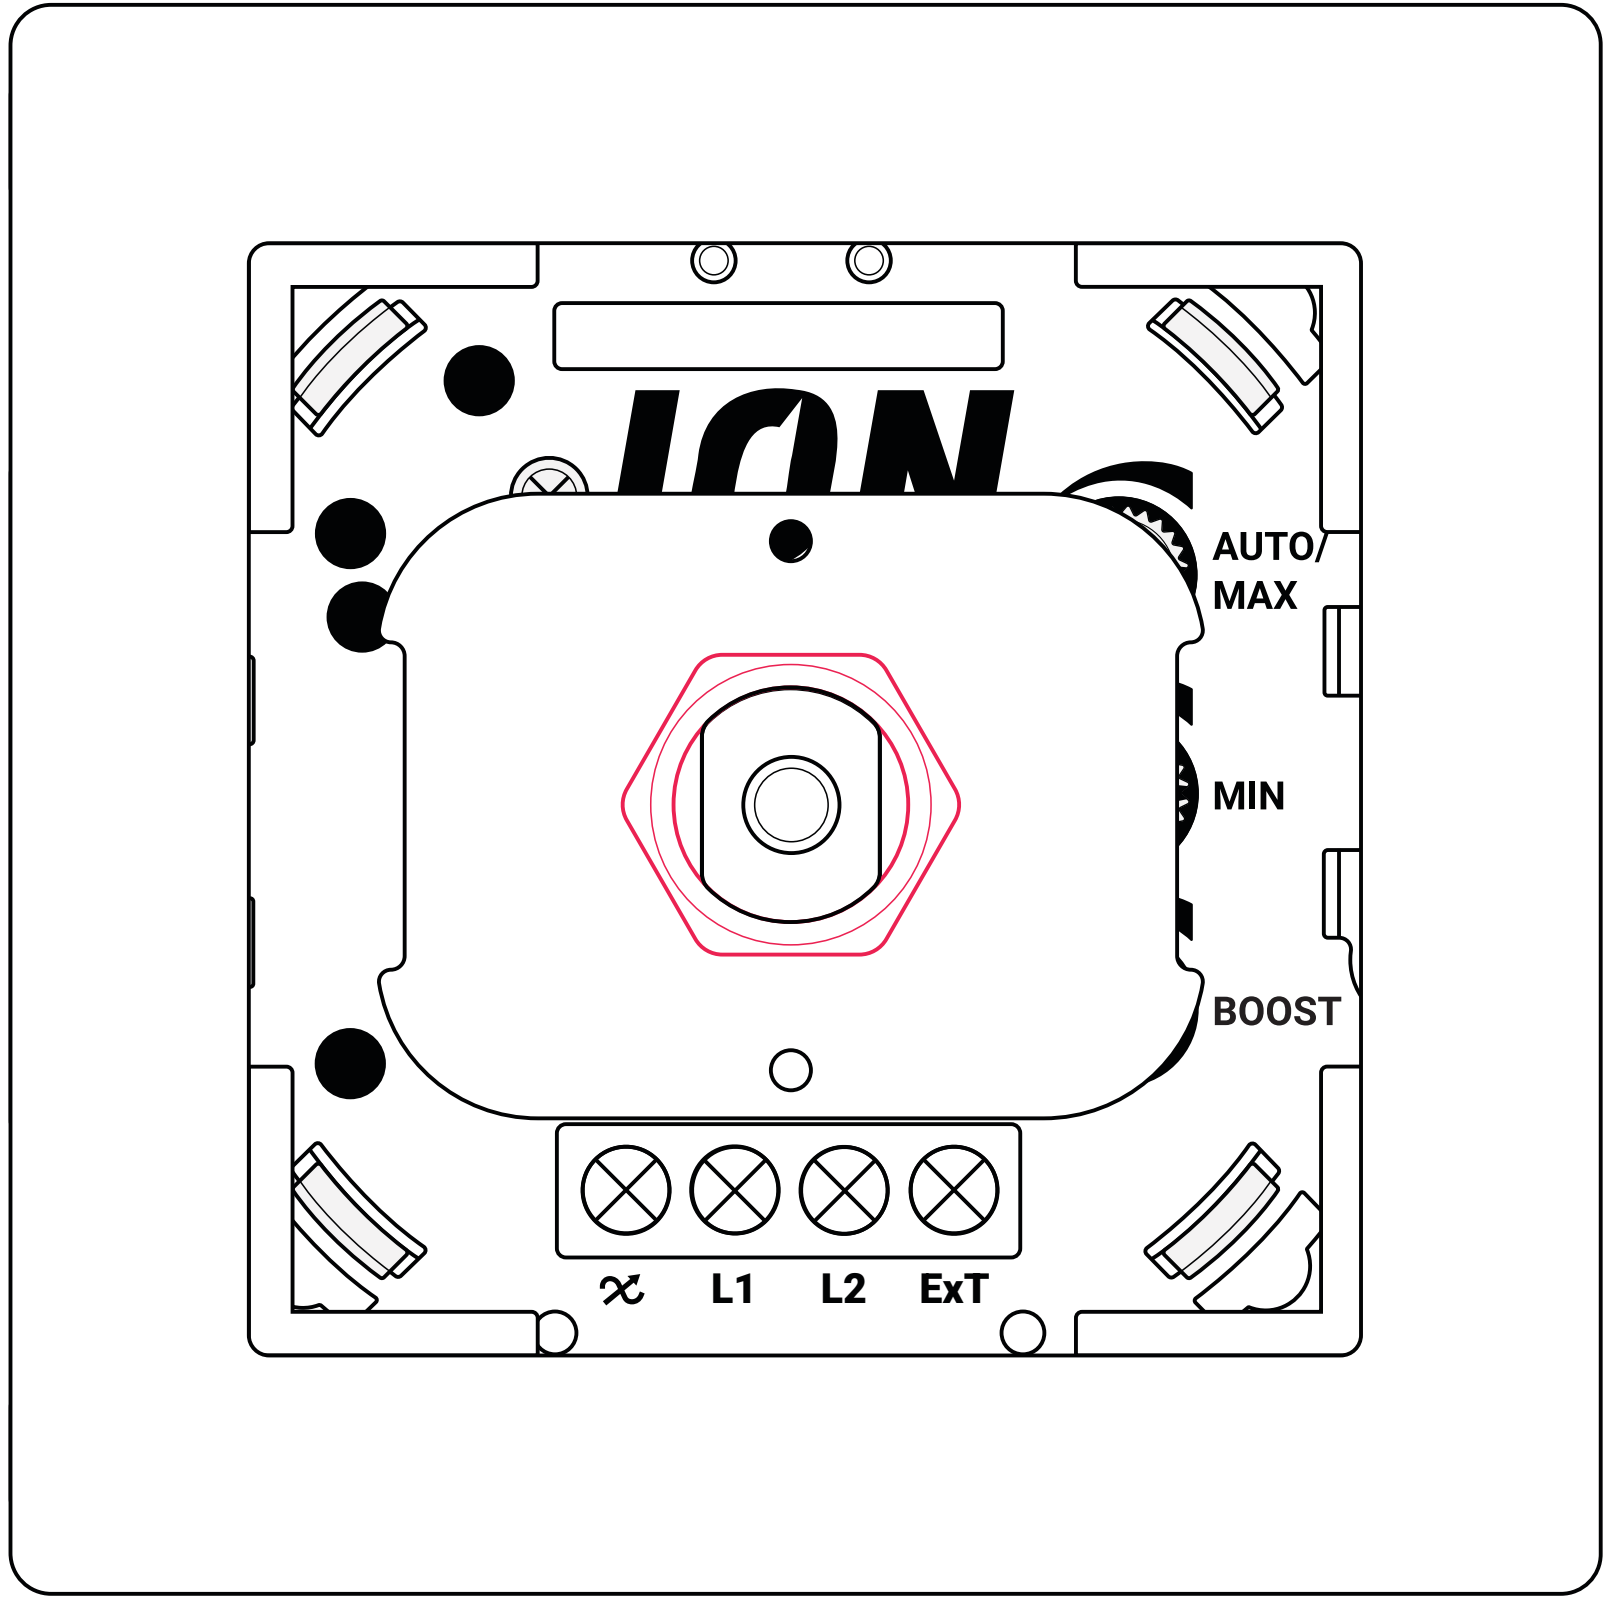


Step 3. Fit **the ring first**, then tighten the **hex nut** clockwise.

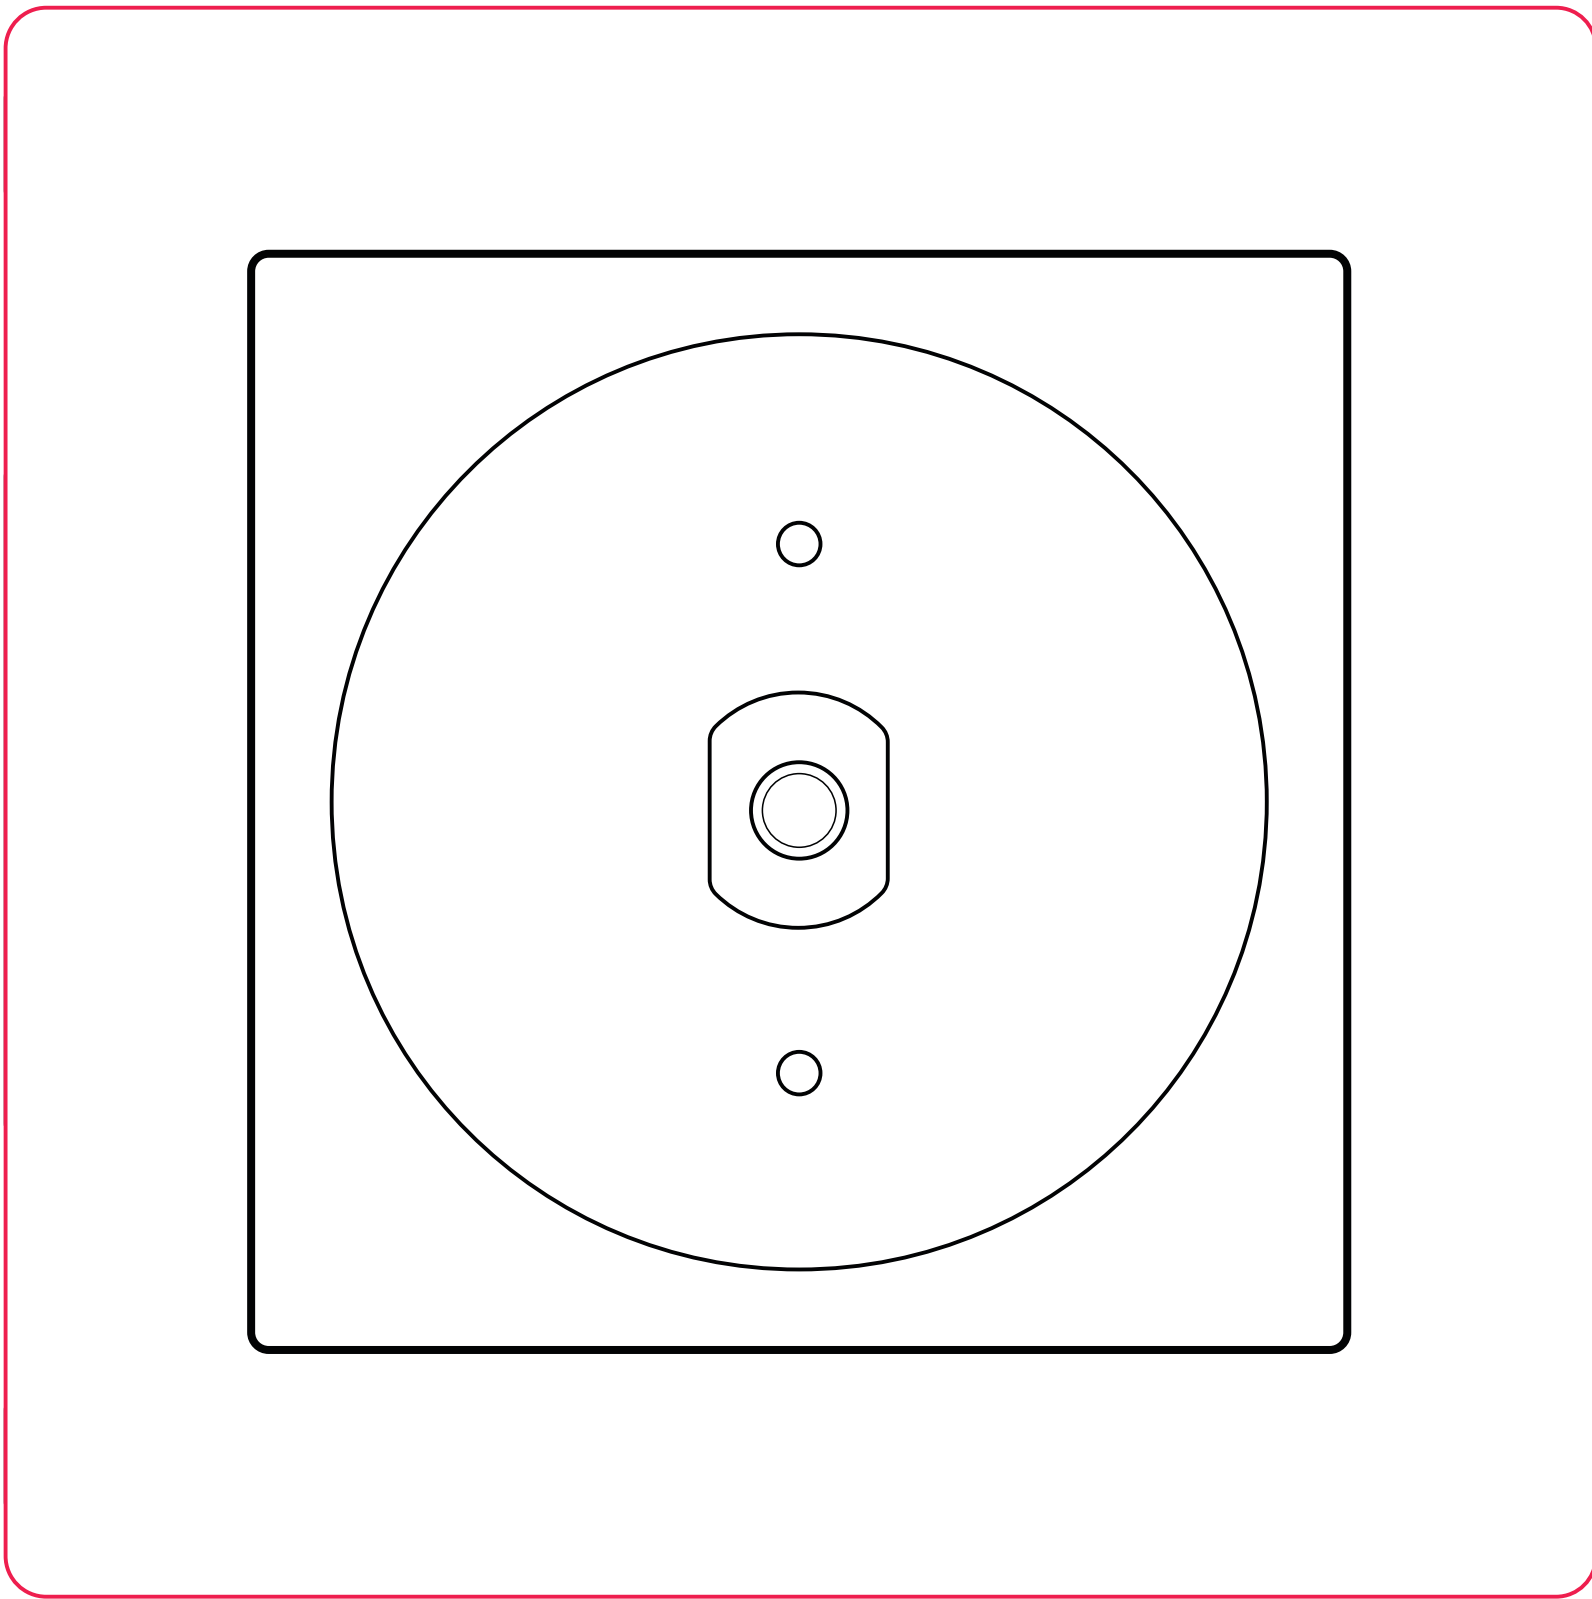


Step 4. Fit the **cover frame**.

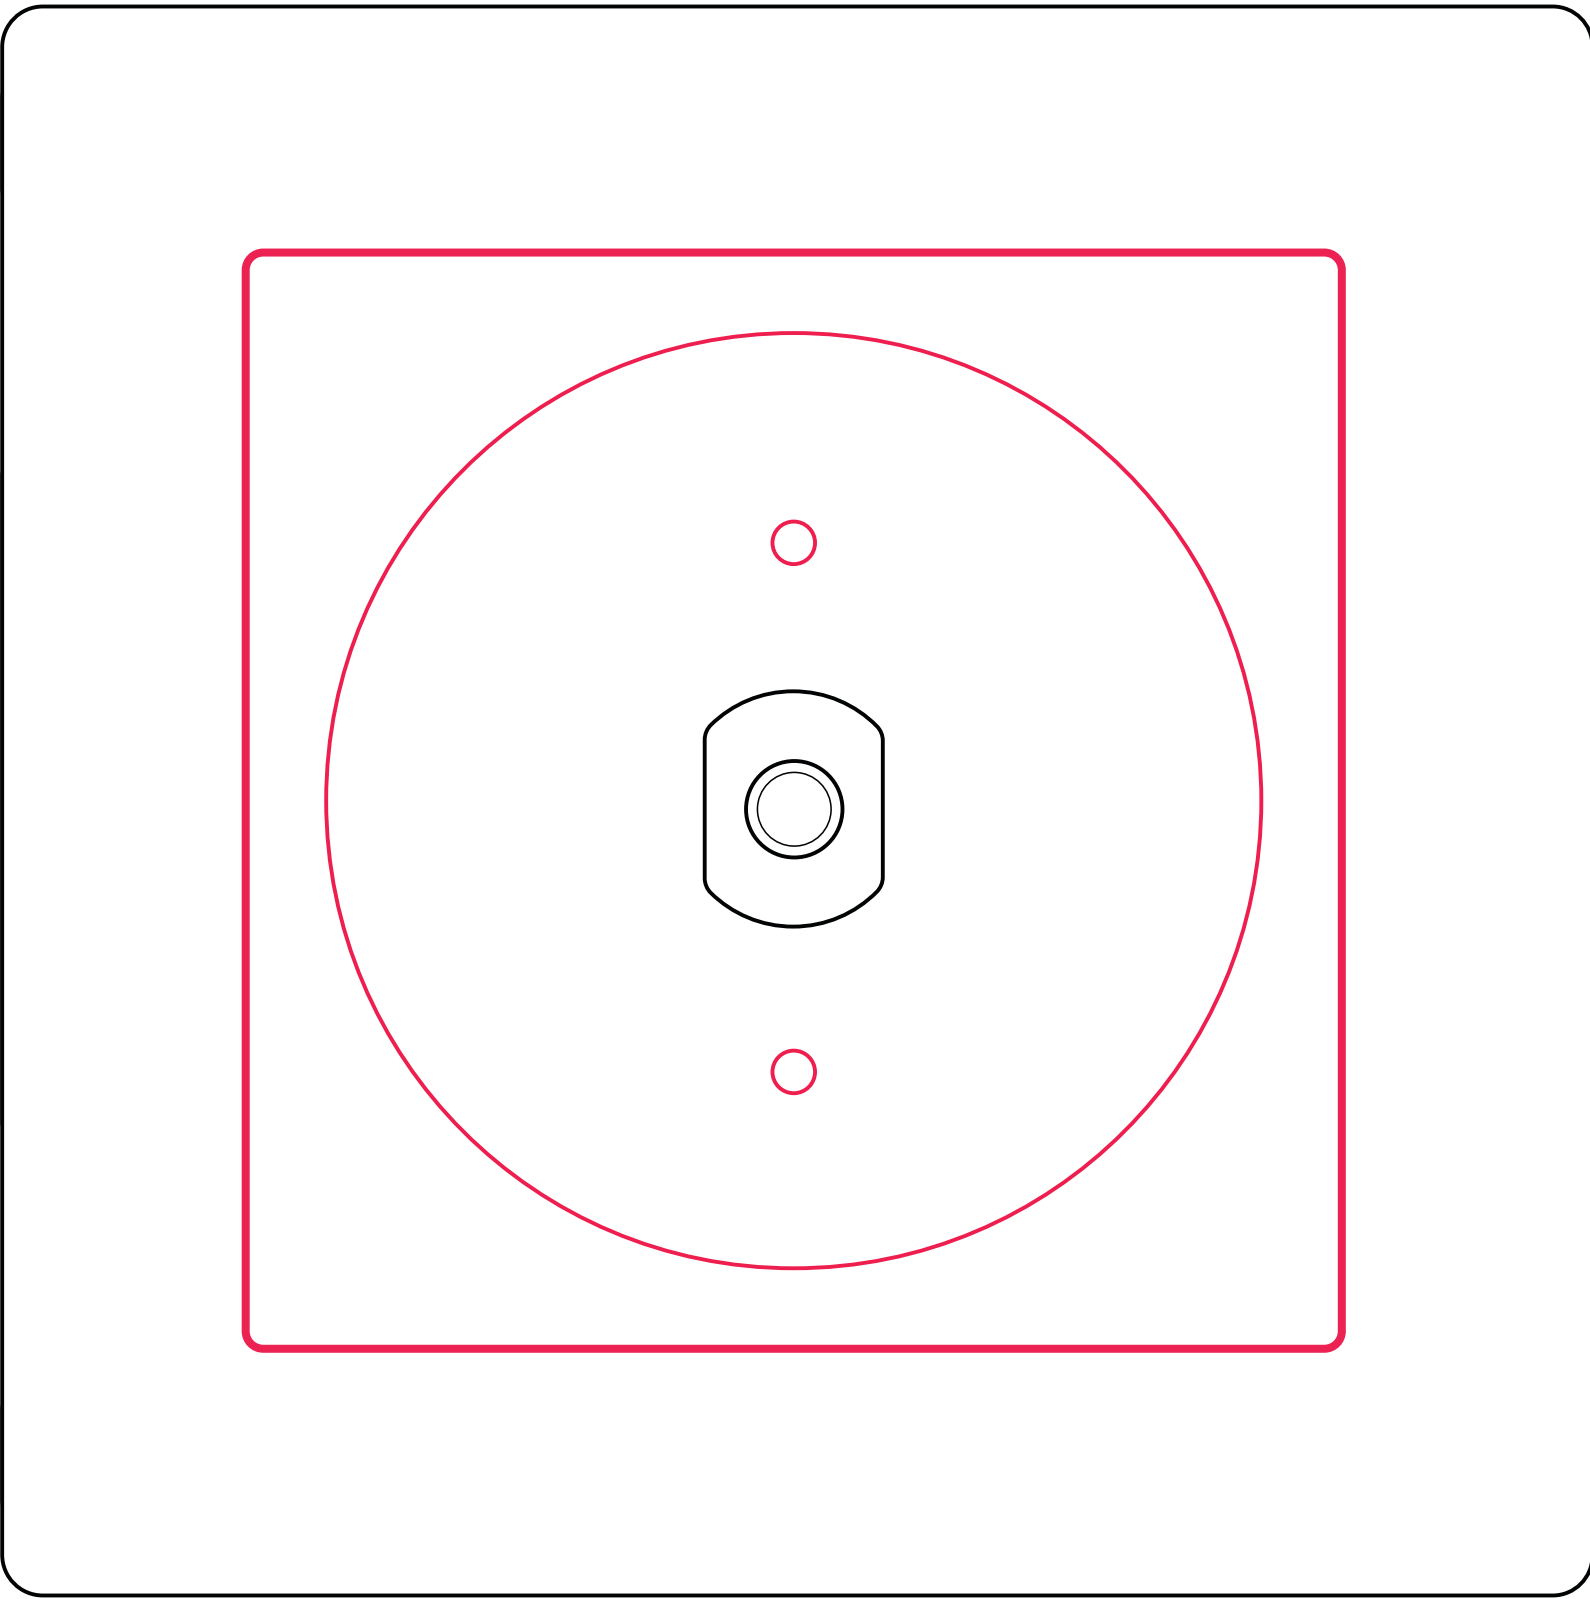

Step 5. Fit the Niko **central plate**.

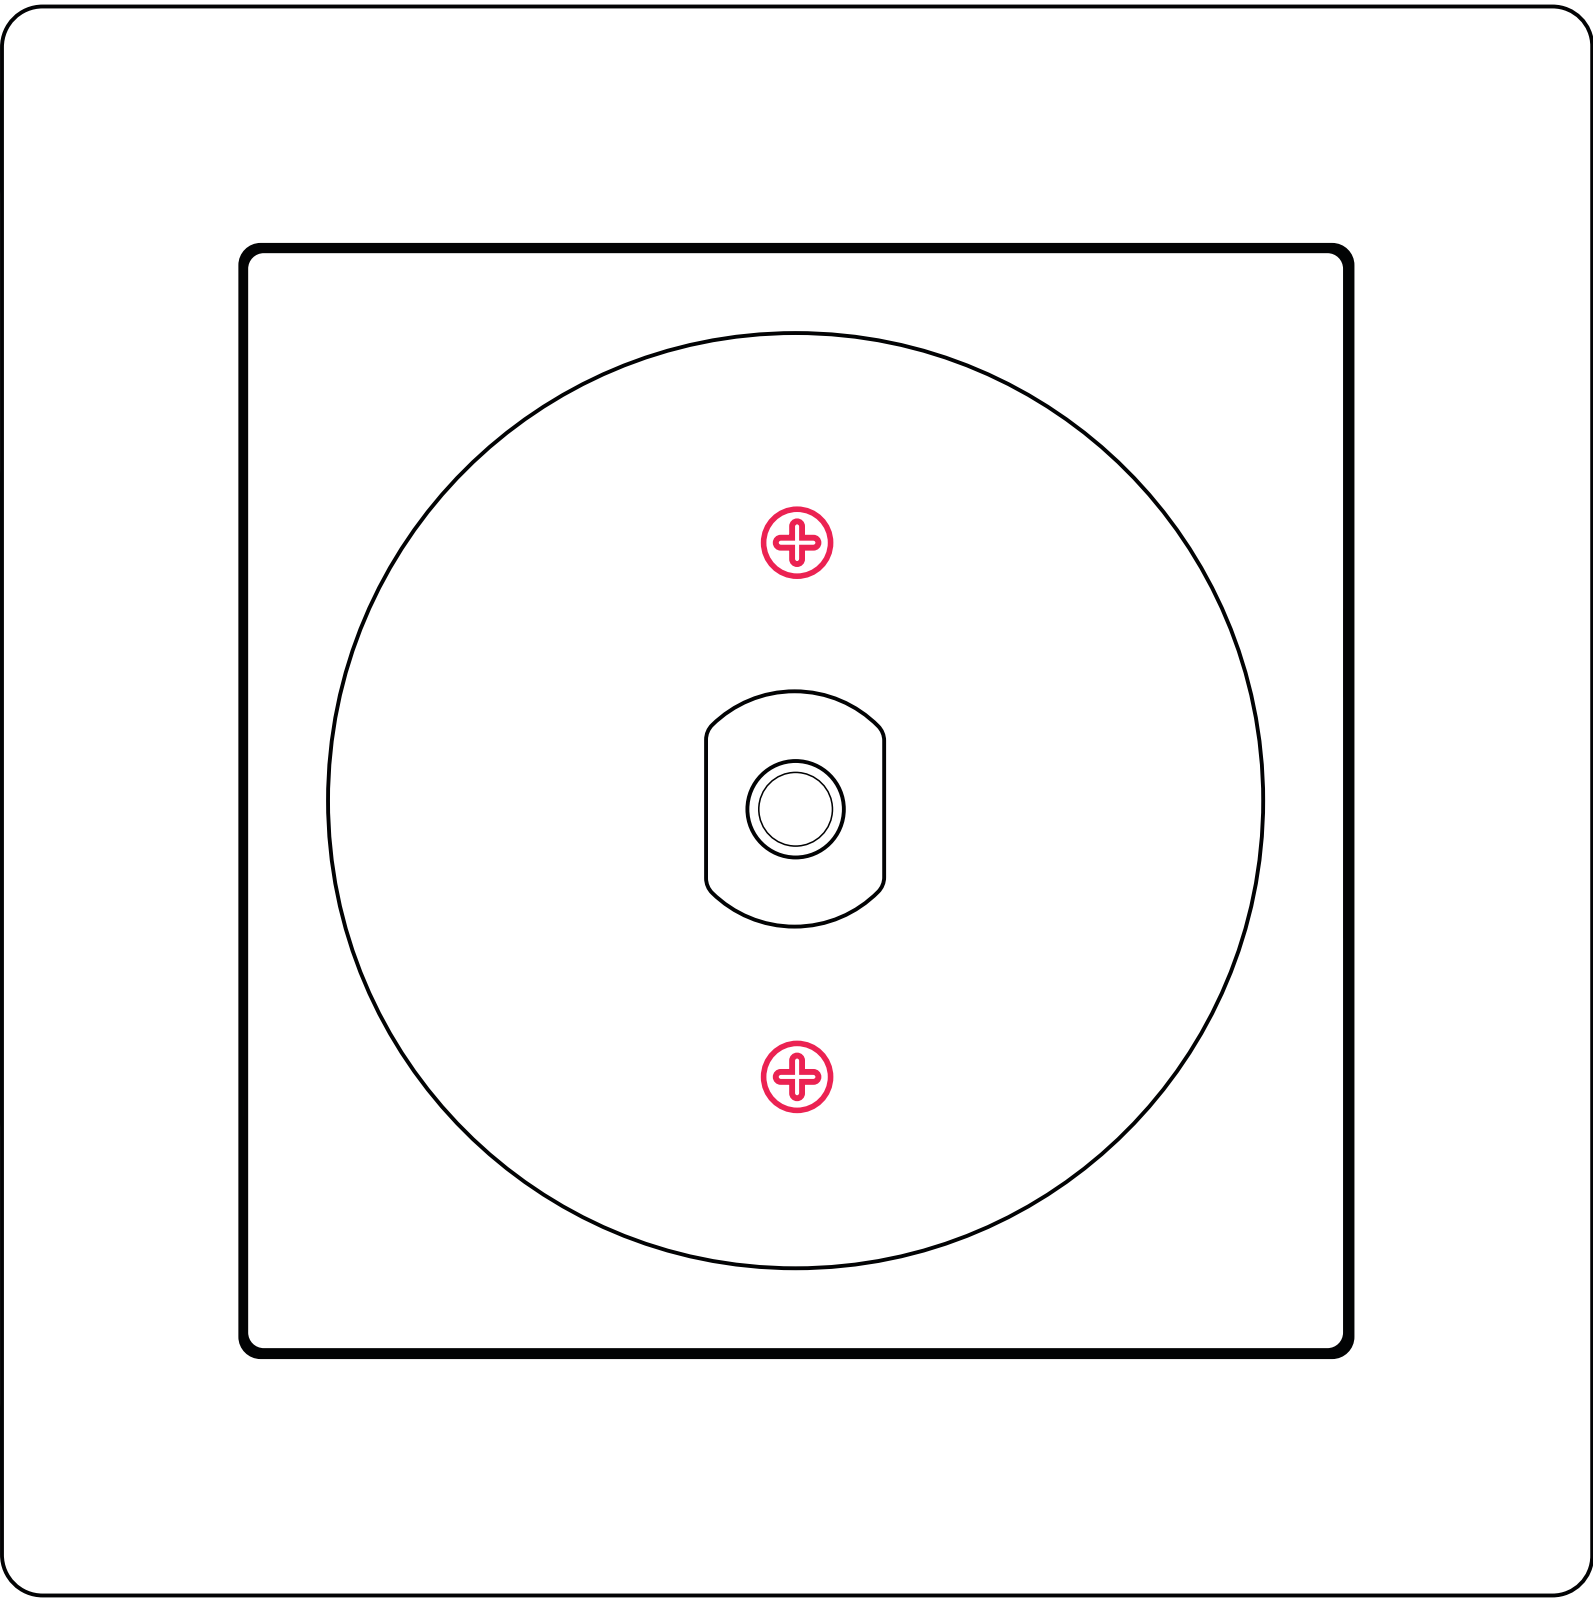

Step 6. Insert the **screws** into the designated holes and tighten them.

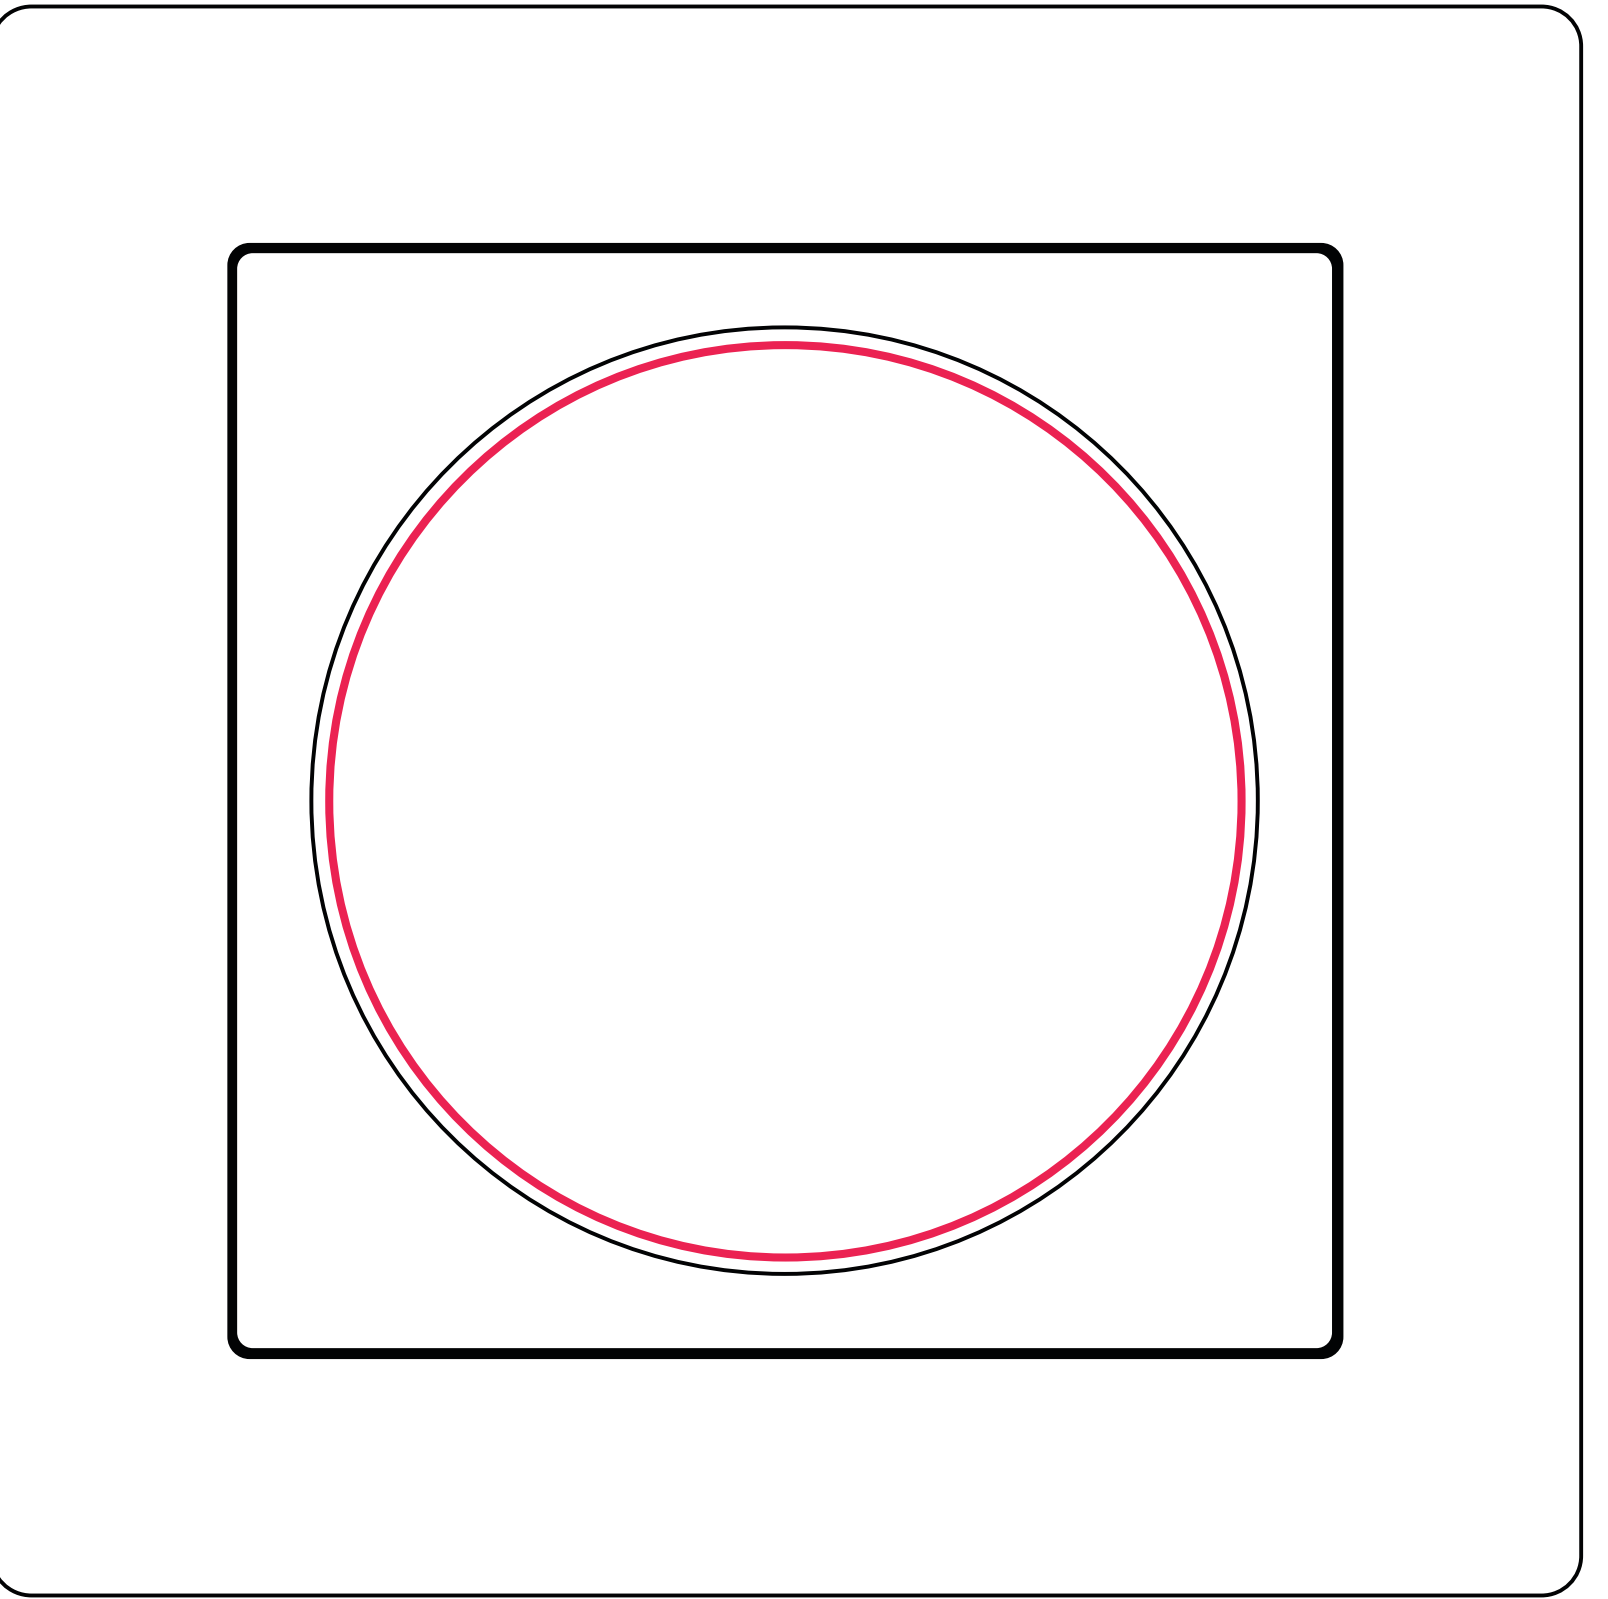

Step 7. Fit the **dimmer knob**.